Apotop® Wi-Reader Pro™ DW17

Available on the App Store

ANDROID APP ON Google play

FCC Statement

This device compiles with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:
1.Reorient the receiving antenna.
2.Increase the separation between the equipment and receiver.
3.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4.Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Location of Controls

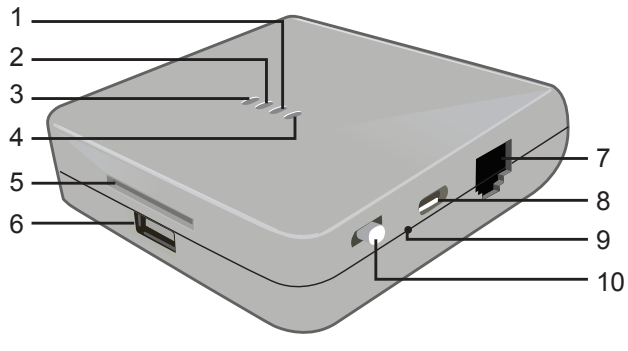

1. Wi-Fi Indicator
2. Card/Drive Indicator
3. Charging Indicator
4. Power Indicator
5. SD Card Slot
6. USB Port
7. RJ-45 Jack
8. Micro USB Port
9. Reset Button
10. Function Switch

Charging the Wi-Reader Pro

When the Power indicator is orange, it is time to charge the battery. To charge this unit, simply connect the small end of the supplied Micro USB cable to the Micro USB port on this unit and the other end to a powered USB port on a computer or to a USB Power Adapter (Not included). While charging, the charging indicator will light red. When fully charged, the charging indicator will turn off.

Charging an Apple or Android Device

To charge an Apple or Android device, simply plug the cable from the external device's charging port to the USB port on the Wi-Reader Pro. Then slide the Function switch to the Charge position; the external unit will be charged.

Using the Wi-Reader Pro as a Card Reader

iOS (Shown in blue)

Text in blue pertains to the Apple Device only.
Screens may vary slightly depending on the Apple device you are using.
1.Download the Wi-Reader App from the Apple App Store.
2.Insert an SD Card into the SD card slot or insert a Flash drive into the USB port.

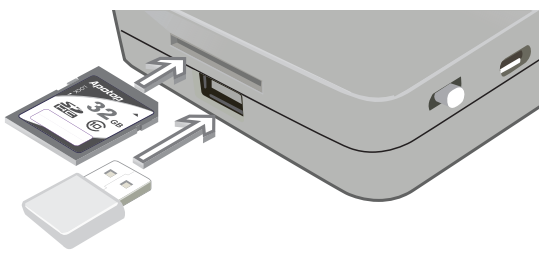

3.Slide the Function switch to the position; the Power indicator will light and after a short while, the indicator will blink blue and the Wi-Reader Pro will be available. Tap the Settings App on your i-device, then select Wi-Fi. From this Wi-Fi list, select Wi-Reader Pro_xxxxxx (x represents random digits).

4.Tap the Wi-Reader App to open the App. You will see five items: Videos, Photos, Music, Documents and Folder View. Select Folder View to view contents of SD card or Flash drive, or select one of the options to view the contents. See below for valid format.
Video: M4V, MP4, MOV
Photos: JPG, BMP, PNG
Music: MP3, WAV, AAC
Documents: PDF, DOC, PPT, TXT, HTM, XLS, KEY, PAGES, NUMBERS

5.Tap one of the files and it will play/appear in the Wi-Reader App. If you try to play a non-valid file, "Unable to Open" will appear on the screen.

6.What Else Can You Do With Files:
While a list (music, photo, etc.) appears, tap on one of the option, for example Photos, tap Edit, tap on the desired file and then click the icon. This will bring up buttons which perform the following functions:
Save to Library (Photos only): Tap to save the photo to your device's photo library.
Download: Tap to download the file into your Collections.
Move: Tap to move files.
Export: Tap to export the file into other App.
Rename: Tap to rename the file.
Delete: Tap to delete the file.
Cancel: Tap to cancel.

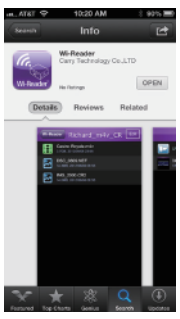

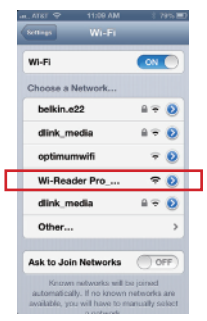

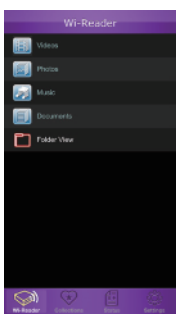

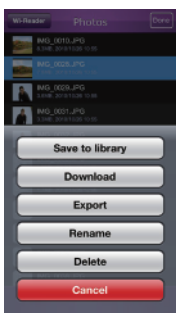

Android (shown in green)

Text in green pertains to the Android only.
Screens may vary slightly depending on the Android device you are using.
1.Download the Wi-Reader Pro App from the Google Play Store.

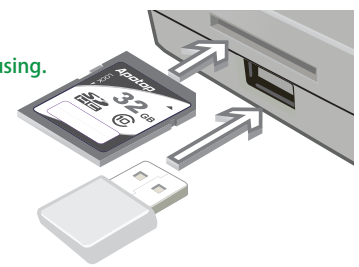

2.Insert an SD Card into the SD card slot or insert a Flash drive into the USB port.
3.Slide the Function switch to the position; after a short while, the indicator will blink blue and the Wi-Reader Pro will be available. Enter the Settings on your device, then Wi-Reader Pro_xxxxxx (x represents random digits).

4. Tap the Wi-Reader Pro App to open the App. You will see five items: Videos, Photos, Music, Documents and Folder View.
Select Folder View to view contents of SD card or Flash drive, or select one of the options to view the contents. See below for valid format.
Video: Please download MX Player or MoboPlayer to watch videos on this App.
Photos: JPG, BMP, PNG
Music: MP3, WAV, AAC
Documents: PDF, DOC, PPT, TXT, HTM, XLS
Note: For HTC/Samsung Phone, please use the build-in Polaris Office App. For other Android phones, please download OliveOffice.

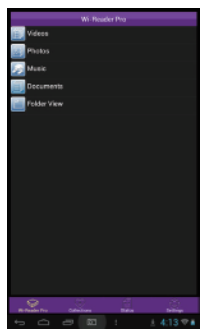

5.Tap one of the files and it will play/appear in the Wi-Reader Pro App. If you try to play a non-valid file, "no app support" will appear on the screen.

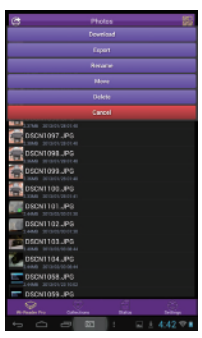

6.What Else Can You Do With Files:
While a list (music, photo, etc.) appears, tap on one of the option, for example photos, tap the icon (top right), tap on the desired file and then click the icon (top left). This will bring up buttons which perform the following functions:
Download: Tap to download the file into your Collections.
Export: Tap to export the file into other App.
Rename: Tap to rename the file.
Move: Tap to move fies.
Delete: Tap to delete the file.
Cancel: Tap to cancel.

Viewing or Uploading Files in Your Collections

iOS

1.Open the Wi-Reader App as previously described. Tap the Collections icon at the bottom of the screen and the Collections screen will appear.

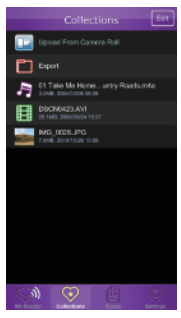

2.If any files have been saved to your collection, simply tap on one to play/view it in the Wi-Reader App.

3.To Upload a file from your photos on your device to an SD card/flash drive, tap Upload From Camera Roll. Select photo(s) then tap Done. Select where to upload the files to, then tap Done and the unit will upload the files.

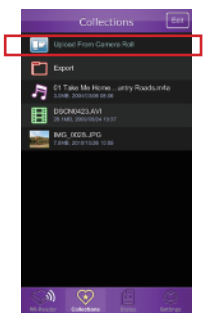

4.While in the Collection’ s list, tap the Edit button at the top right to bring up the icons at the bottom of the screen.
Select a file, then tap the icon. This will bring up a screen that will allow you to Upload, Move, Export, Rename, Delete or Mail the selected file.

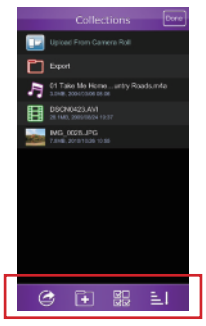

- Tap to create a new folder.
- Tap to select all files.
- Tap to sort the files, either by Name, Type or Date.

Android

1.Open the Wi-Reader Pro App as previously described. Tap the Collections icon at the bottom of the screen and the Collections screen will appear.

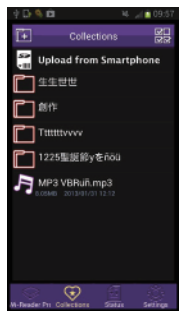

2.If any files have been saved to your collection, simply tap on one to play/view it in the Wi-Reader Pro App.

3.To Upload a file from your device to an SD card/flash drive, tap Upload From Smartphone. Select file(s) then tap Choose target folder then tap Upload and the unit will upload the files.

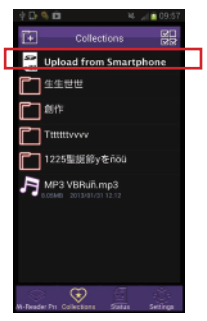

4.While in the Collection’ s list, tap the icon (top right), tap on the desire file and then click the icon (top left). This will bring up options which allow you to Upload, Export, Rename, Move or Delete the selected file.

5.While in the Collection’ s list, tap the icons to perform the following functions:

- Tap to create a new folder.
- Tap to sort the files, either by Name, Type or Date.

Creating a Wi-Fi Hotspot (Similar procedure for iOS or Android Device)

Illustrations are of the iPhone, but the other iOS and Android screens are very similar.

1.Plug internet cable into RJ-45 jack. It is recommended to keep the Wi-Reader Pro connected to the computer; or a USB power adapter.

2.Slide the Function switch to the position; the power indicator will light and after a short while, the indicator will blink blue and the Wi-Reader Pro will be available. Tap the Settings App on your iOS device, then select Wi-Fi (on Android, go to Wi-Fi setting). From this Wi-Fi list, select Wi-Reader Pro_xxxxxx (x represents random digits).

3.Open the device’ s browser then enter “10.10.1.1” in the space provided for the URL.

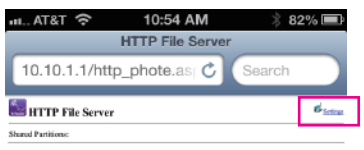

4.Select Settings at the top right of the screen.

5.Select Gateway and then tap Next. At the next LAN Interface screen, tap Next again.

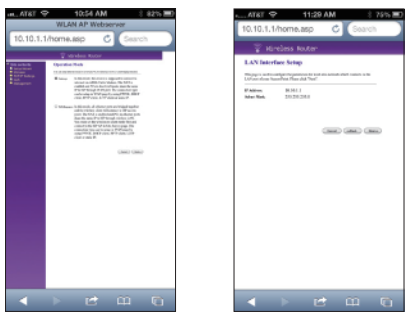

6.If connecting through a hotel room’ s internet connection, select DHCP from the WAN Access Type pull down menu.
If connecting through ASDL modem, select PPPoE from the WAN Access Type pull down menu and enter your username/password. Tap Next.

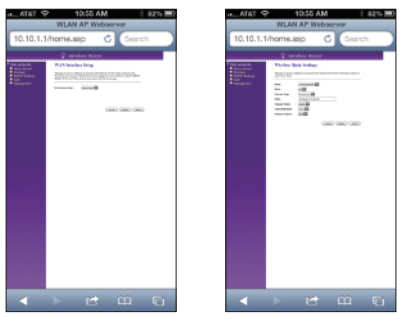

7.At the Wireless Basic Setting screen, you can change the SSID of Wi-Reader or tap on Next to continue.

8.At the Wireless Security Setup screen, you can set the password of the Wi-Fi here then tap Finished.
The Wi-Reader Pro will reboot. You may have to change the Wi-Reader Pro will reboot. You may have to change the Wi-Fi to the Wi-Reader Pro_xxxxxx again.

Wi-Fi Repeater

This unit can also be used as a Wi-Fi Repeater. This feature will allow you to extend the signal by receiving the signal and then sending it out again, thus extending the

Settings

Tap the Settings icon at the bottom right of the screen to bring up the Setting screen. The items listed on this screen perform the following:
App Version: This is App version.
About Wi-Reader: If connected to the internet, tap this to see more info about the Wi-Reader.
Send Feedback: Tap to send feedback about Wi-Reader or the Wi-Reader app.
Device Setting: Tap to enter the Wi-Fi password and/or change the Wi-Fi SSID.
Connect Setting (iOS only): Used by iOS, you will not need this unless instructed.
Clean Thumnail Cache: Tap to clean the Thumbnail Cache which takes space on your device.
Check storage Space: Tap to view the sda 1 Free Space and the Collection files Used Space.
Logout (Android only): Tap to log out.

iOS

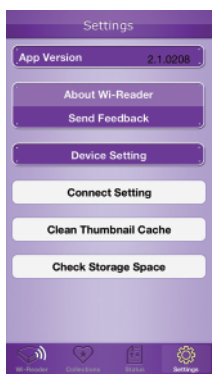

Android

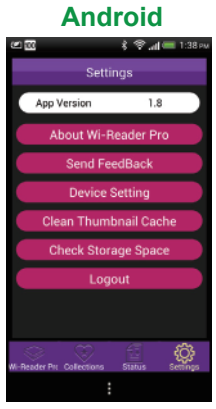

Resetting the Wi-Reader Pro

If you are having trouble or experiencing erratic operation with the Wi-Reader Pro, the blue light flash while operating Wi-Reader Pro, follow the instruction below.

Insert a pin or similar pointed object into the Reset button, hold 3-4 seconds, until the blue light stop flashing. This will reset the Wi-Reader Pro.

Contacting Us

If you have any trouble, please try resetting the unit as describe above. If that does not work, you can contact us using the Send Feedback option in the Setting or visiting www.carry.com.tw